


13-14 Mustang Shelby GT500 5.8 Supercharged Driver Catch Can Installation

Instructions:

1. Install the steel mesh into the inlet chamber side of the top of the can and leave the outlet empty then install the screen and O-ring to hold it in. (Inlet side is the side coming from the valve cover).
2. Screw in the pipe plug or petcock into the bottom of the can.
3. Install the mounting bracket to the oil catch can lid using the supplied Allen head bolt and key.
4. Install the bottom of the can to the top.
5. Install the 3/8 fittings into the side of the can.
6. Disconnect the vent line going from the Intake tube to the top of the driver valve cover. See picture 2 below.
7. Mount the catch can to the inside of the fender next to the brake master cylinder using an existing hole with the provided hardware. See picture 1 below.
8. Push the straight OEM fitting onto the end of one hose. Connect the fitting to the side of the intake pipe, route the hose under the intake tube and connect the other end to the outlet side of the catch can.
9. Push the 90* OEM fitting onto the end of the other hose. Connect the fitting to the top of the valve cover, route the hose under the intake tube and connect the inlet side of the catch can. .

NEVER RETURN OIL FROM THE CATCH CAN BACK INTO THE ENGINE

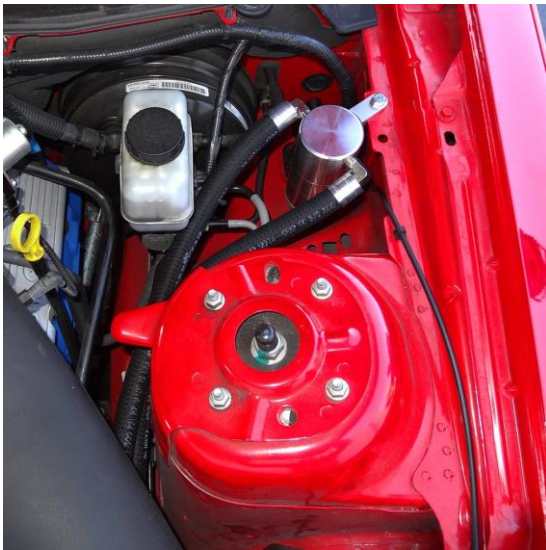

Be sure to shop our online store for the best deals: www.uprproducts.com